7. Operating mode

7.1 Slave proportional mode

7.1.1 Operation

The three-phase output voltage varies directly or indirectly proportional to the input.

7.1.2 Direct Slave control

Switch 2 of DIP switch SW1 = off

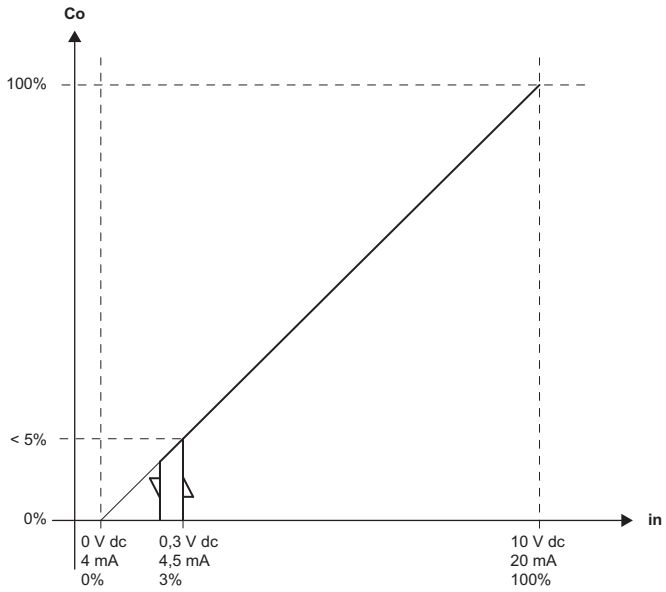

7.1.3 Inverse Slave control

Switch 2 of DIP switch SW1 = on

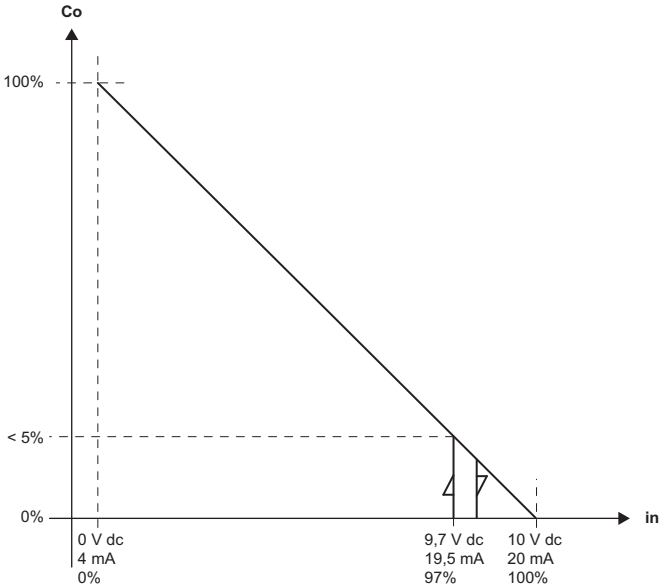

7.1.4 Control output OUT 0-10 V

The output signal is directly proportional to the input signal and does not depend on the position of switch 2 of DIP switch SW1.

